

C: TO CONNECT A HOST COMPUTER TO A TIME MACHINE

TIME MACHINE
RS232 PORT

GROUND	4
HANDSHAKE	3
RECEIVE	2
TRANSMIT	1

HOST COMPUTER
25 PIN RS232 CONNECTOR

7	GROUND
4	RTS
2	TRANSMIT
3	RECEIVE

OR

TIME MACHINE
RS232 PORT


GROUND	4
HANDSHAKE	3
RECEIVE	2
TRANSMIT	1

(4) BLACK
 (3) RED
 (2) GREEN
 (1) YELLOW

HOST COMPUTER
9 PIN RS232 CONNECTOR

5	GROUND
7	RTS
3	TRANSMIT
2	RECEIVE

BACK of DB9 FEMALE CONNECTOR

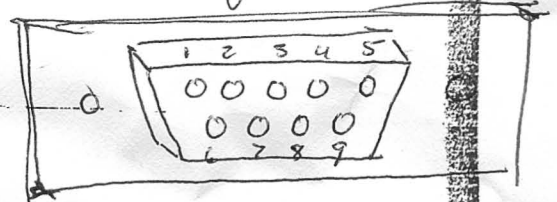


4 WIRE PHONE CBL

PIN 1 = RED STRIPE
→ yellow

PIN 4 → BLACK

PIN 2 → GREEN

PIN 3 → RED

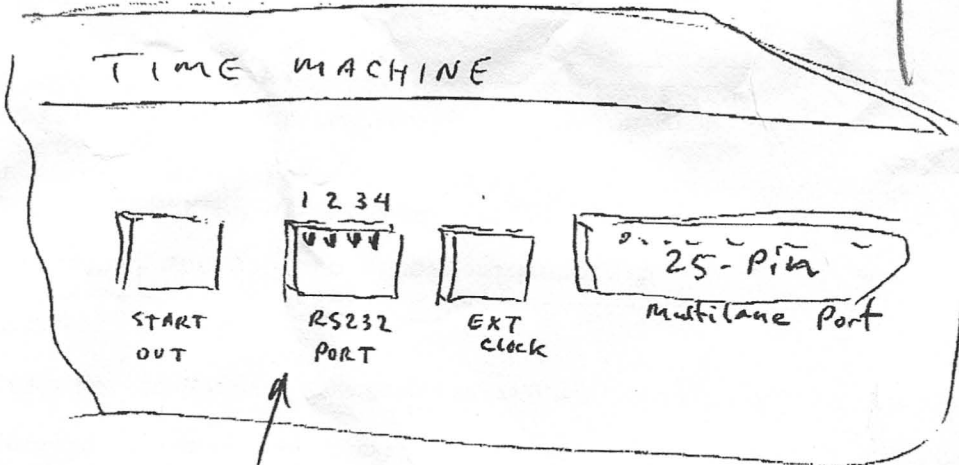

pins are numbered 1-4, Left-to-right Looking in.



Blue
yellow
GREEN
RED

6 WIRE - (USE INSIDE 4)

Medical Information Technology, Inc. MEDITECH Circle, Westwood, Massachusetts 02090 (781) 821-3000 Fax (781) 329-9977

MEDITECH

Medical Information Technology, Inc. MEDITECH Circle, Westwood, Massachusetts 02090 (781) 821-3000 Fax (781) 329-9977

in MY-PC, set the PORT # to 4
 Go to Run the Meet / interfaces / button times - Tim Machine / Open / use Serial Port
 Select to close the PORT and 4 for the USA port.